

IN THE EVENT OF AN ALARM


The Alarm indicates that the water level in the unit is too high. This is the warning that the unit may back up. It is suggested to Stop the use of all water.

If an alarm condition does not clear itself after 15 minutes please call for service.

Repetitive intermittent alarms should be reported to service as well as this indicates a part could be wearing out or not working properly.

Silencing an Alarm

The alarm may be silenced by pushing the silence button located on the bottom of the alarm panel - the light will stay lit.

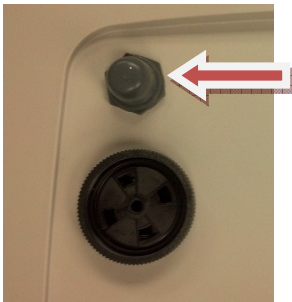

KEEPING WATER USE TO A MINIMUM

Listed below are a few helpful hints:

1. Flush only when necessary.
2. If you need to run the tub or shower, put a stopper in the drain to keep the water from going down the drain.
3. Do not run appliances that require water, such as washing machines or dishwashers.
4. Use sinks sparingly.